

## WARNING


ELECTRICAL SHOCK HAZARD, CAN CAUSE SEVERE INJURY OR DEATH. DISCONNECT POWER BEFORE INSTALLING AND/OR SERVICING.

## NOTES:

- ALL WIRING MUST BE INSTALLED IN ACCORDANCE WITH:

   U.S.A. N.E.C. AND ANY OTHER NATIONAL, STATE, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
  - CANADA C.S.A., C22.1 C.E.C. PART 1 AND ANY OTHER NATIONAL, PROVINCIAL, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
- 2. ALL SAFETY CIRCUIT WIRING MUST BE: a. U.S.A. N.E.C. CLASS 1.
  - b. CANADA C.S.A. C22.1 C.E.C. PART 1.
- 3. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, TYPE 90°C WIRE OR ITS EQUIVALENT MUST BE USED.
- 4. THERMOSTAT ANTICIPATOR SETTING (SINGLE ZONE): SEE LABEL ON CONTROL MODULE.

## LADDER WIRING

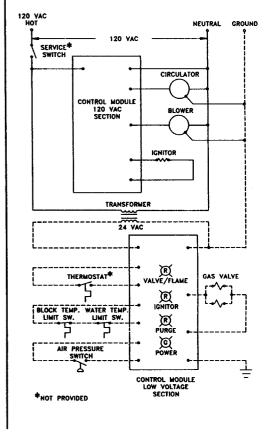

NOTICE - ALL CONTACTS SHOWN WITHOUT POWER APPLIED - OFF SHELF CONDITION.

- FOR MULTIPLE ZONING USE EITHER ZONE VALVES OR CIRCULATORS. REFER TO THE COMPONENT MANUFACTURER'S INSTRUCTIONS FOR APPLICATION AND WIRING.
- 6. REFER TO CONTROL COMPONENT INSTRUCTIONS PACKED WITH THE BOILER FOR APPLICATION INFORMATION.