
SCHEMATIC WIRING DIAGRAM

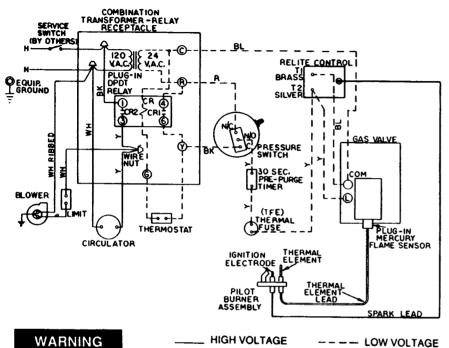


Electric shock hazard. Can cause severe injury or death. Disconnect power source before install-

ing or servicing. Burner access shield must be in position during boiler operation to prevent excessive delay in proving pilot (2 minutes or more) and/or a momentary flame roll-out on main flame ignition, which can melt the thermal fuse. NEVER jumper the thermal fuse or a hazardous condition will exist.

NOTES:

- 1. All wiring must be installed in accordance with the requirements of the National Electrical Code and any additional national, state, or local code requirements having jurisdiction.
- 2. All safety circuit wiring must be N.E.C. Class 1.
- 3. Refer to Control Components Instructions Sheets packed with the boiler for application information.
- 4. Use only 90° C. Thermoplastic Wire, or equivalent, if any of the original wire must be replaced.

LADDER WIRING DIAGRAM

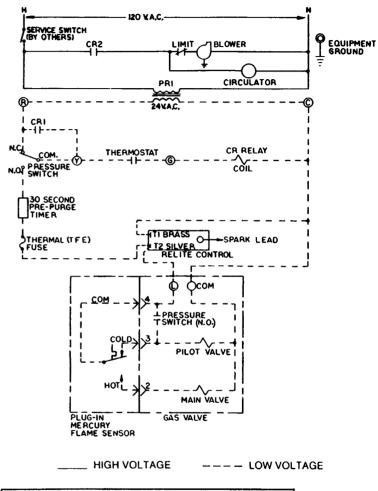

THERMOSTAT HEAT ANTICIPATOR SETTING	
HE and VHE	
0.40 AMPS.	

HE and VHE-White Rodgers Cycle-Pilot®-Boiler Schematic and Ladder Diagrams. Applicable for forced hot water boilers.

NATURAL GAS ONLY

WEIL- McLAIN°

Michigan City, Indiana 46360 A Marley Company