



## WARNING

Electrical shock hazard. Can cause severe injury or death. Disconnect power before installing or servicing.

### NOTES:

- \*Not required for factory mutual specifications.
- \*\* Remove factory installed jumper when low fire control is used.
- All wiring must be installed in accordance with the requirements of the national Electrical Code and any additional state or local code requirement having jurisdiction.
- All safety circuit wiring must be N.E.C. Class 1.
- Refer to control component instruction sheets packed with the boiler for application information.
- If any of the original wire must be replaced, use 90°C thermoplastic or equivalent.

- ⑤ R7795D TERMINAL
- ⑦ CONTROL PANEL TERMINAL
- ② TIMER TERMINAL
- ② CONTROL CABINET LAMP

- SILICONE INSULATED CABLE
- HIGH VOLTAGE FACTORY WIRING
- LOW VOLTAGE FACTORY WIRING
- HIGH VOLTAGE FIELD WIRING
- LOW VOLTAGE FIELD WIRING

Wiring diagram—WMFP-1F Control System for use on LGB-6 thru 12 boilers. IRI and FM High Risk gas controls.

**WEIL-McLAIN**  
Michigan City, Indiana 46360  
A Marley Company