



## WARNING

Electrical shock hazard. Can cause severe injury or death. Disconnect power before servicing and/or installing.

### NOTES:

- \*Not required for factory mutual specifications.
- \*\*Remove factory installed jumper when low fire control is used.
- All wiring must be installed in accordance with the requirements of the national Electrical Code and any additional state or local code requirement having jurisdiction.
- All safety circuit wiring must be N.E.C. Class 1.
- Refer to control component instruction sheets packed with the boiler for application information.
- If any of the original wire must be replaced, use 90°C thermoplastic or equivalent.

- ⊗ R7795D TERMINAL
- ⑦ CONTROL PANEL TERMINAL
- ⊙ TIMER TERMINAL
- ⊙ S86 TERMINAL
- Ⓢ CONTROL CABINET LAMP

- SILICONE INSULATED CABLE
- HIGH VOLTAGE FACTORY WIRING
- LOW VOLTAGE FACTORY WIRING
- HIGH VOLTAGE FIELD WIRING
- LOW VOLTAGE FIELD WIRING

Wiring diagram—WMFP-2F Control System for use on LGB-13 thru 23 boilers. IRI and FM High Risk gas controls.



**WEIL-McLAIN**  
 A United Dominion Company

Weil-McLain • 500 Blaine St. • Michigan City, IN 46360-2388