


SCHEMATIC WIRING DIAGRAM

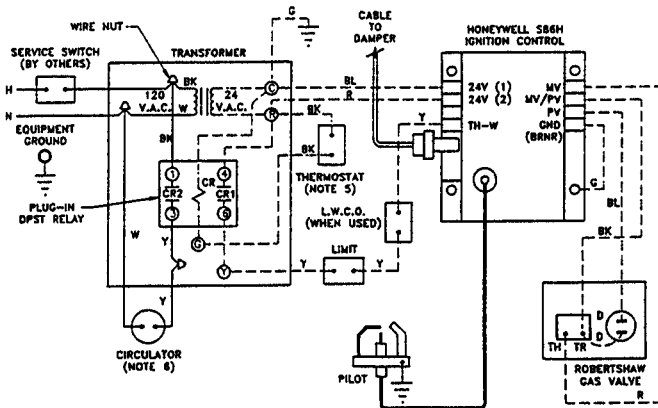


WARNING

ELECTRICAL SHOCK HAZARD. CAN CAUSE SEVERE INJURY OR DEATH. DISCONNECT POWER BEFORE INSTALLING AND/OR SERVICING.

NOTES:

- ALL WIRING MUST BE INSTALLED IN ACCORDANCE WITH:
 - U.S.A. - NATIONAL ELECTRICAL CODE AND ANY OTHER NATIONAL, STATE, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
 - CANADA - C.S.A. C22.1 CANADIAN ELECTRICAL CODE PART 1 AND ANY OTHER NATIONAL, PROVINCIAL, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
- ALL SAFETY CIRCUIT WIRING MUST BE:
 - U.S.A. - N.E.C. CLASS 1.
 - CANADA - C.S.A. C22.1 C.E.C. PART 1.
- IF ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, TYPE 90°C OR ITS EQUIVALENT MUST BE USED.
- REFER TO CONTROL COMPONENT INSTRUCTIONS PACKED WITH BOILER FOR APPLICATION INFORMATION.
- FOR SINGLE ZONE SYSTEMS, THERMOSTAT ANTICIPATOR SETTING IS 0.40 AMPS. FOR MULTIPLE ZONE SYSTEMS USING ZONE VALVES OR CIRCULATORS, REFER TO COMPONENT MANUFACTURER'S INSTRUCTIONS FOR APPLICATION, WIRING AND THERMOSTAT ANTICIPATOR SETTING.
- CIRCULATOR NOT USED WITH EG GRAVITY HOT WATER SYSTEMS.

LADDER WIRING DIAGRAM

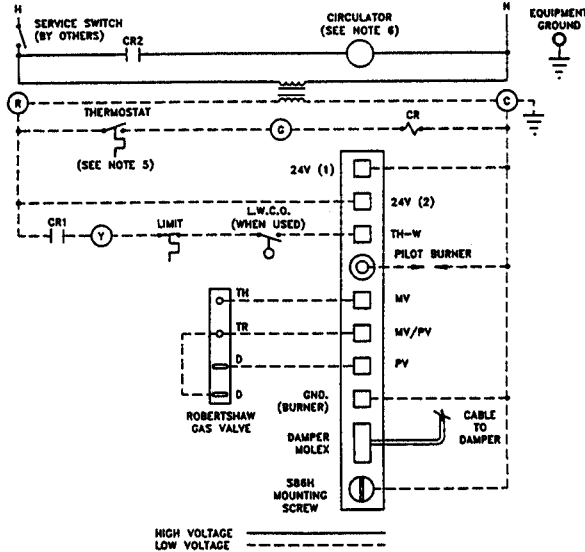

NOTICE - ALL CONTACTS SHOWN WITHOUT POWER APPLIED - OFF SHELF CONDITION.


Wiring Diagram for EGH, PFG-6 thru 8
 • Intermittent Ignition System, Honeywell S86H
 • Forced Hot Water or Gravity Hot Water,
 Without Tankless Heater

WEIL-McLAIN

A Division of The Marley Company
 Michigan City, Indiana 46360

PART NUMBER 550-224-082/1290WN

SCHEMATIC WIRING DIAGRAM

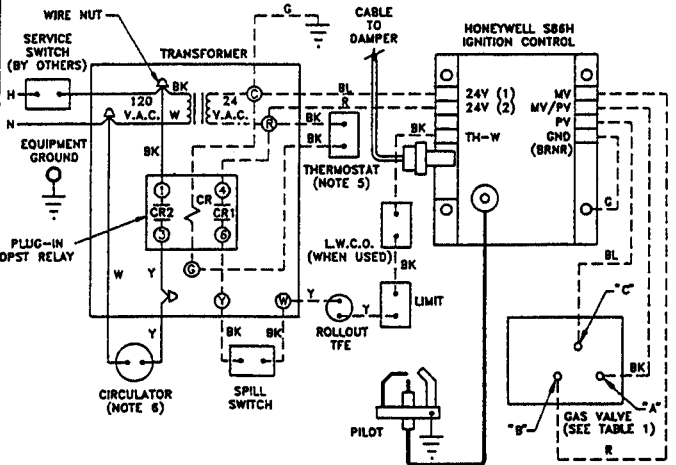

WARNING

ELECTRICAL SHOCK HAZARD. CAN CAUSE SEVERE INJURY OR DEATH. DISCONNECT POWER BEFORE INSTALLING AND/OR SERVICING.

NOTES:


- ALL WIRING MUST BE INSTALLED IN ACCORDANCE WITH:
 - U.S.A. - NATIONAL ELECTRICAL CODE AND ANY OTHER NATIONAL, STATE, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
 - CANADA - C.S.A. C22.1 CANADIAN ELECTRICAL CODE PART 1 AND ANY OTHER NATIONAL, PROVINCIAL, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
- ALL SAFETY CIRCUIT WIRING MUST BE:
 - U.S.A. - N.E.C. CLASS 1.
 - CANADA - C.S.A. C22.1 C.E.C. PART 1.
- IF ORIGINAL ROLLOUT TFE WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, TYPE 200°C WIRE OR ITS EQUIVALENT MUST BE USED. IF OTHER ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, TYPE 90°C OR ITS EQUIVALENT MUST BE USED.
- REFER TO CONTROL COMPONENT INSTRUCTIONS PACKED WITH BOILER FOR APPLICATION INFORMATION.
- FOR SINGLE ZONE SYSTEMS, THERMOSTAT ANTICIPATOR SETTING IS 0.40 AMPS. FOR MULTIPLE ZONE SYSTEMS USING ZONE VALVES OR CIRCULATORS, REFER TO COMPONENT MANUFACTURER'S INSTRUCTIONS FOR APPLICATION, WIRING AND THERMOSTAT ANTICIPATOR SETTING.
- CIRCULATOR NOT USED WITH EG GRAVITY HOT WATER SYSTEMS.

TABLE 1: GAS VALVE TERMINAL DESIGNATIONS

GAS VALVE	"A"	"B"	"C"
HONEYWELL VR8204, VR8304	PV/MV	MV	PV
HONEYWELL VR8440	TR	TH	TH-TR
WHITE-RODGERS 36C, 36E	2-4*	3	1

*FACTORY JUMPED

LADDER WIRING DIAGRAM

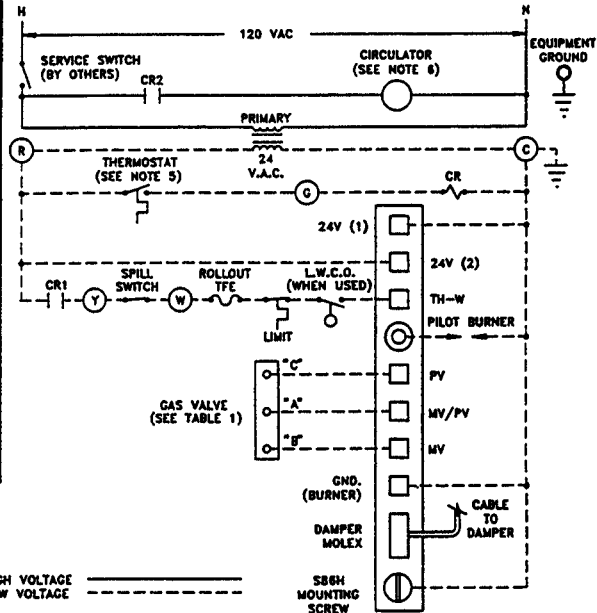

HIGH VOLTAGE
 LOW VOLTAGE

- REFER TO CONTROL COMPONENT INSTRUCTIONS PACKED WITH BOILER FOR APPLICATION INFORMATION.
- FOR SINGLE ZONE SYSTEMS, THERMOSTAT ANTICIPATOR SETTING IS 0.40 AMPS. FOR MULTIPLE ZONE SYSTEMS USING ZONE VALVES OR CIRCULATORS, REFER TO COMPONENT MANUFACTURER'S INSTRUCTIONS FOR APPLICATION, WIRING AND THERMOSTAT ANTICIPATOR SETTING.
- CIRCULATOR NOT USED WITH EG GRAVITY HOT WATER SYSTEMS.

NOTICE - ALL CONTACTS SHOWN WITHOUT POWER APPLIED - OFF SHELF CONDITION.

Wiring Diagram for CGM, PFG-5A, EG

• Intermittent Ignition System, Honeywell S86H
 • Forced Hot Water or Gravity Hot Water,
 Without Tankless Heater

WEIL-McLAIN

A Division of The Marley Company
 Michigan City, Indiana 46360

PART NUMBER 550-224-077/1290WN