



**WEIL-McLAIN**

# *Ultra Oil*

## **Oil-Fired Water Boiler**

### **Addendum**

**This Addendum needs to be used in conjunction with Boiler Manual  
P/N 550-141-986/1005 - Ultra Oil -**

**NOTICE**

Indicates special instructions on installation, operation or maintenance that are important but not related to personal injury or property damage.

**NOTICE**

Changes to text. The following information replaces the referenced text on page 10 of the Ultra Oil Boiler Manual.

#### **Combustion chamber floor blanket —**

#### **All Direct Vent and UO-3, 0.8 GPH firing rate**

Place the **ceramic fiber floor blanket** on the floor of the combustion chamber. The blanket and instructions are supplied in the UO-3 low firing rate kit for the 0.8 GPH boiler or supplied with the Beckett burner for direct vent. See page 33 for location.

#### **Check chamber and burner door**

2. All Direct Vent and UO-3, 0.8 GPH firing rate — Check for secure placement of combustion chamber floor blanket.

**NOTICE**

For page 32, the following text change:

Item 19, Description is “All Direct Vent and UO-3, 0.8 GPH firing rate” 591-221-287

**NOTICE**

For page 36, make the following replacements:

Item 13, Description is “Cover Control Bracket” 595-000-010 (Replaces 550-404-306)



As an ENERGY STAR Partner, Weil-McLain  
has determined that this product meets the  
ENERGY STAR guidelines for energy efficiency

Weil-McLain  
500 Blaine Street  
Michigan City, IN 46360-2388  
<http://www.weil-mclain.com>

550-142-050/0508