


SCHEMATIC WIRING DIAGRAM

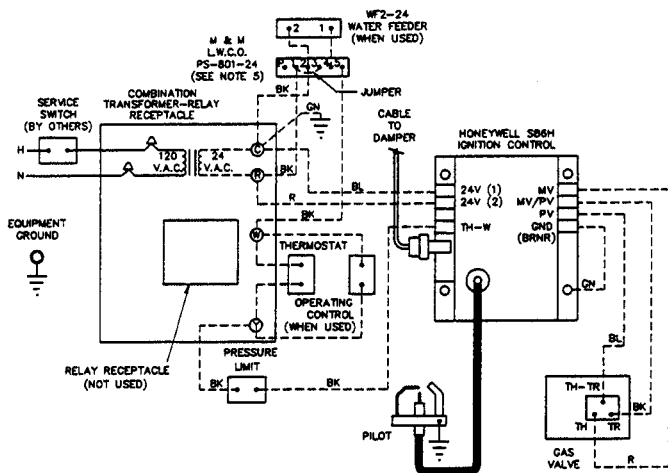

WARNING


ELECTRICAL SHOCK HAZARD, CAN CAUSE SEVERE INJURY OR DEATH. DISCONNECT POWER BEFORE INSTALLING AND/OR SERVICING.

NOTES:

1. ALL WIRING MUST BE INSTALLED IN ACCORDANCE WITH THE REQUIREMENTS OF THE NATIONAL ELECTRICAL CODE AND ANY ADDITIONAL NATIONAL, STATE, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
2. ALL SAFETY CIRCUIT WIRING MUST BE N.E.C. CLASS 1.
3. REFER TO CONTROL COMPONENTS INSTRUCTIONS SHEETS PACKED WITH THE BOILER FOR APPLICATIONS INFORMATION.
4. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH TYPE 90°C WIRE OR ITS EQUIVALENT.
5. TERMINAL "P" NOT USED. DO NOT WIRE INTO CIRCUIT.

THERMOSTAT HEAT ANTICIPATOR SETTING	
STEAM	
WITHOUT DAMPER	WITH DAMPER
0.8 AMPS	0.9 AMPS

LADDER WIRING DIAGRAM

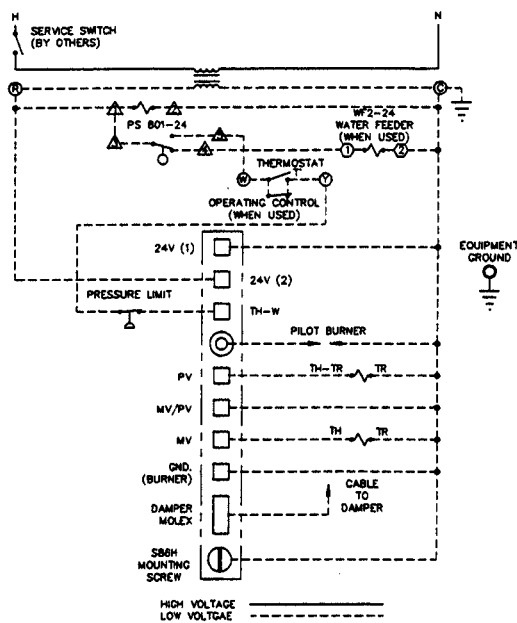

NOTICE - ALL CONTACTS SHOWN WITHOUT POWER APPLIED - OFF SHELF CONDITION.


EG/EGH STEAM BOILER SCHEMATIC AND LADDER WIRING DIAGRAMS. HONEYWELL 588H ELECTRONIC IGNITION SYSTEM WITH OR WITHOUT VENT DAMPER. APPLICABLE FOR STEAM WITH McDOWELL AND MILLER PS-801-24 LOW WATER CUT-OFF WITH OR WITHOUT WF2-24 WATER FEEDER AND OPTIONAL INDIRECT HEATER.

WEIL-McLAIN

Michigan City, Indiana 46360
A Marley Company

PART NUMBER 550-224-485/1069WM

SCHEMATIC WIRING DIAGRAM

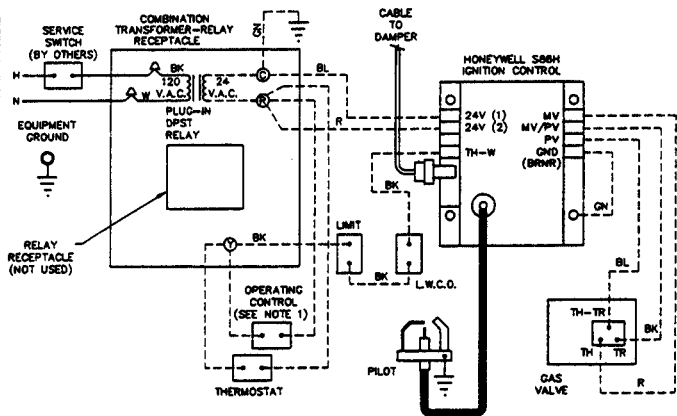

WARNING

ELECTRICAL SHOCK HAZARD, CAN CAUSE SEVERE INJURY OR DEATH. DISCONNECT POWER BEFORE INSTALLING AND/OR SERVICING.

NOTES:

1. REQUIRED FOR STEAM BOILERS EQUIPPED WITH TANKLESS HEATERS ONLY.
2. ALL WIRING MUST BE INSTALLED IN ACCORDANCE WITH:
 - a. U.S.A. - N.E.C. AND ANY OTHER NATIONAL, STATE, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
 - b. CANADA - C.S.A., C22.1 C.E.C. PART 1 AND ANY OTHER NATIONAL, PROVINCIAL, OR LOCAL CODE REQUIREMENTS HAVING JURISDICTION.
3. ALL SAFETY CIRCUIT WIRING MUST BE:
 - a. U.S.A. - N.E.C. CLASS 1.
 - b. CANADA - C.S.A. C22.1 C.E.C. PART 1.
4. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH TYPE 90°C WIRE OR ITS EQUIVALENT.
5. REFER TO CONTROL COMPONENTS INSTRUCTION SHEETS PACKED WITH THE BOILER FOR APPLICATIONS INFORMATION.

THERMOSTAT HEAT ANTICIPATOR SETTING	
STEAM	
WITHOUT DAMPER	WITH DAMPER
0.8 AMPS	0.9 AMPS

HIGH VOLTAGE
LOW VOLTAGE

NOTICE - ALL CONTACTS SHOWN WITHOUT POWER APPLIED - OFF SHELF CONDITION.

EG/EGH BOILER SCHEMATIC AND LADDER WIRING DIAGRAMS. HONEYWELL 588H ELECTRONIC IGNITION SYSTEM WITH OR WITHOUT VENT DAMPER. APPLICABLE FOR STEAM WITH FLOAT-TYPE LOW WATER CUT-OFF WITH OR WITHOUT INDIRECT HEATER.

CANADA AND U.S.A.

WEIL-McLAIN

Michigan City, Indiana 46360
A Marley Company

PART NUMBER 550-224-486/1069WM